### Time switch Operating Instructions


Be careful:

Please confirm the power before wiring terminal and terminal load position. If the wiring error the internal contact melting.

Dial is absolutely irreversible (according to the direction of the arrow, the direction of rotation is absolutely irreversible).

Motor load more than 750W (110V), 1500W (220V) must be used with the electromagnetic

switch.

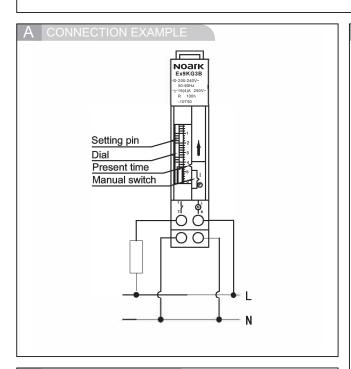

# C SPECIFICATIONS

Rated voltage			110VAC、220VAC
Voltage tolerance			90-121VAC、200-240VAC
Freauency			50Hz/60Hz(common use)
Drive method			Quartz controlled stepping motor
Time precision			±2Sec/day at 22°C
Cycle			24 hours
Power consumption			1W
Working reserve time			100 Hours
L o a d	Circuit		Separate circuit (voltage is not appliedto the load circuit)
	Switch construction		SPST
	Auto ON/OFF		ON/AUTO switch
	Сарасіту	Resistive load	16A
		Incandescent lamp	1000W
		. Inductive(COSΦ=0.6)	4A
		Energy saving lamps	150W
Germin	etting	ON/OFF program setting	15 Minutes
		Minimum nuit	15 Minutes
		Minimum interval	15 Minutes
		No.of ON/OFF operations	96 operations
	Ambient temperature		-10 ∼+50°C
Ambient humidity			Max.85%
Weight			70g

# B OPERATING INSTRUCTIONS

Before turning power ON, check that your unit conforms to the operating voltage.

Noark

When you buy this product, the inside battery for a long discharge itself, the power reserve will lower. When the inside battery completely discharge, even if connect and switch on the power source, the product still not working immediately. Then, please connect and switch on the power source, and wait about 10 minutes before set the product present time. The full power reserve is built up after about 100 hours.


#### 1.Set the operating time:

Set the setting pin between the desired times to the left or right of the Dial.


Set the setting pin to the right of dial: ON-state is reached at that time.if the setting pin is set to the right continuously,ON-state continues only for NO.of setting pinsX15 minutes.

Set the setting pin to the right fully nutil a click is heard.

If the setting pin is set to the left ,at that time,the output is placed

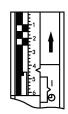

Set the setting pin as shown ON on the above:the time chart is OFF as right:

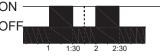

#### 2. Adjust the present time:

Turn the dial till the index is on the current time(Present time).

3 . Set the manual switch:



(permanent ON)
(Auto)

"Auto":Output is turned ON and OFF according to the set program.

Manual "ON":Output is turned ON irrespective of the program. (permanent ON)

Use this mode for test operation.

After completion of test operation,set the manual switch to "AUTO"



